


- 4. Wait 24 hours before use.






#### **Black Circular Patch**

Use on damaged tent.

- 1. Keep surface clean and dry.
- 2. Paste patch on the damage part.



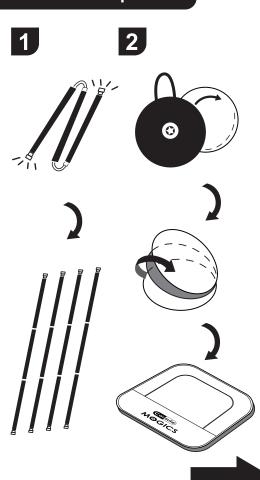

# **CARSULE** Fundamental Assembly



## **MOGICS**

Lay the tent flat with the logo facing up, and unzip the front and rear doors to extend the tent



**\***Un-zip the front & rear door


Put the bottom of the aluminum rod behind the fastener and fix it like the drawing




On the other side, fix the aluminum rod






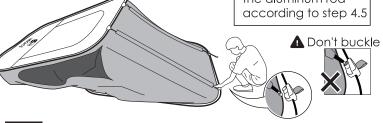


Lift the tent and insert the pole

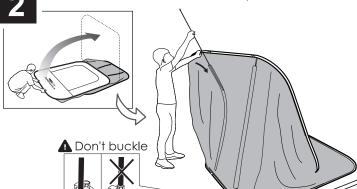


Hold the frame to stand up the tent, and then pull the bottom into a square

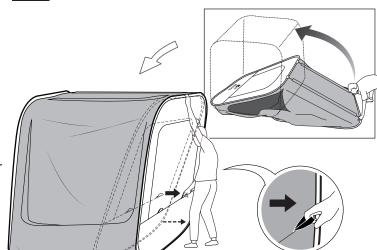


Hold the aluminum pole and put down

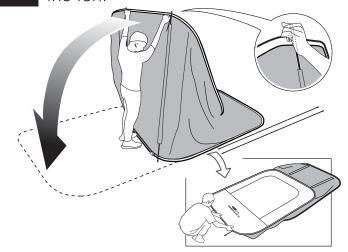


Close both sides windows

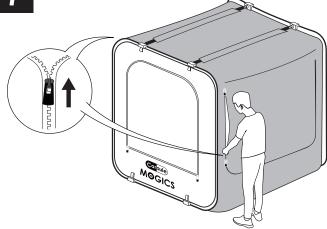

After inserting the upper two aluminum poles, lift the middle of the tent and buckle the poles

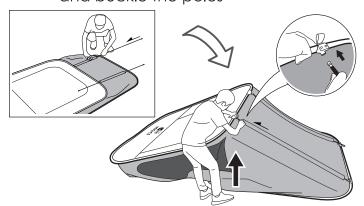


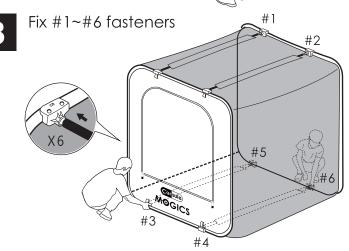


### **Attach to Vehicle**

Instruction Video


Open the rear car door. And lift the front door of the tent upwards.

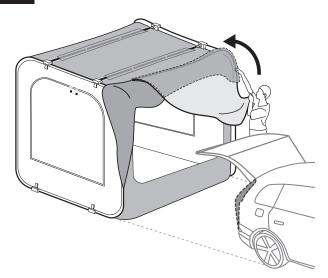


2 Lift tent from the front and move it close to the rear bumper.

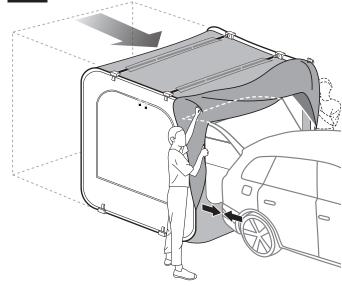


Buckle the anchor strap

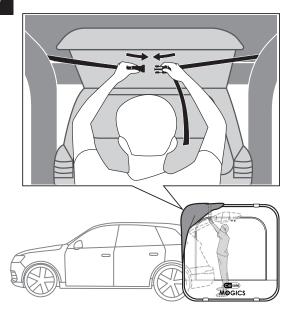

Hang the tension rope Cross two ropes to make it tighter.

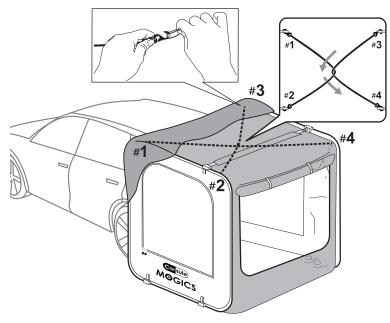

spread out the front flap to cover the trunk lid.

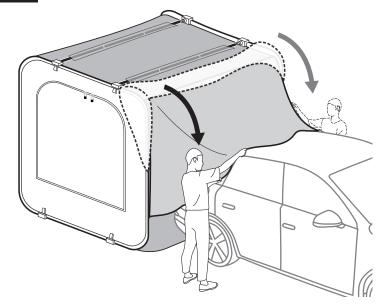

Fold the surplus flap downAnd fix it on theroof and both sides of the car




# Stand Alone Usage (Tension Rope Guy-Rope)

**A** a


Please set up the guy-ropes when Carsule is set standing alone. It is not advised to use Carsule independently in strong wind.

Instruction □ ボョ Video 🏖 🕩


Hang the ension ropes.

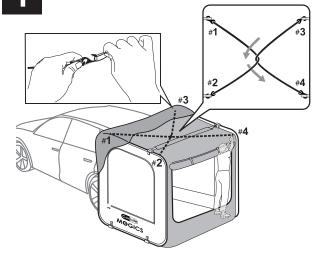


Place the peg at 45 degreetothe ground, and swirl it downward into the ground.

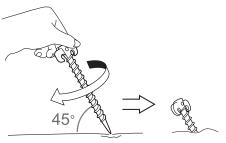

Fix the guy-ropes on the fixing ring, and adjust the ropes to tie the pegs.

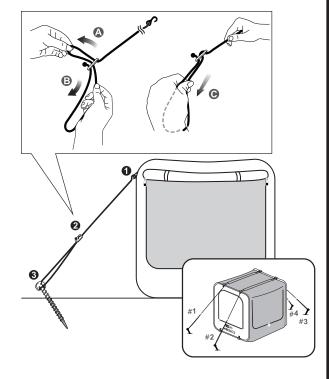

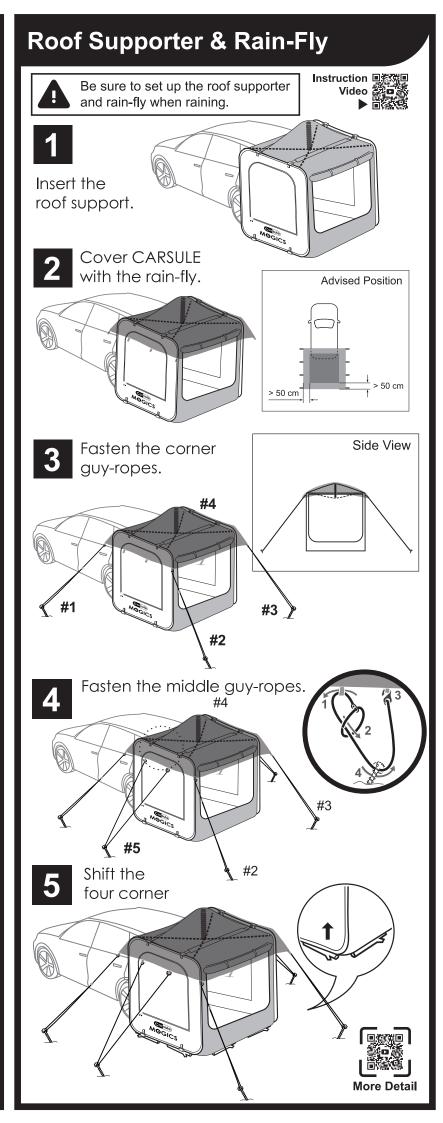

## **Disassembly Preparation**

















### **Fold the Carsule**

Instruction Video




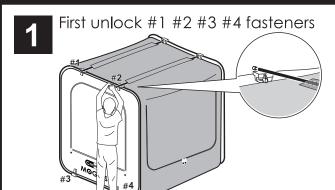


2 Unfasten the #5 #6 #7 #8 fasteners and take out 4 aluminum rods

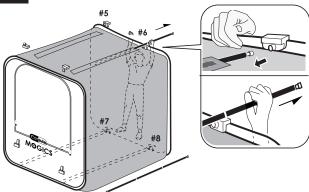

Unzip the zipper to release the air inside the tent

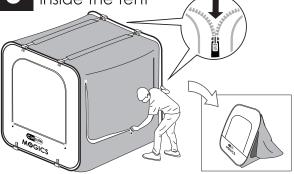


Hold the lower edge of both ends of the frame and lift them up slightly, And fold them inwards and place it flat on the ground.

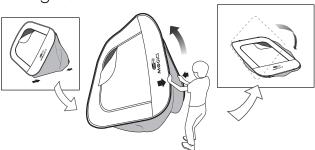



Close the window zips.


Tuck the protuding cloth inwards neatly,




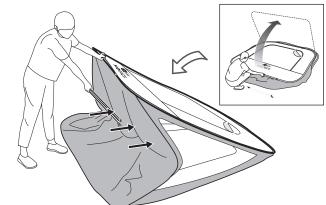


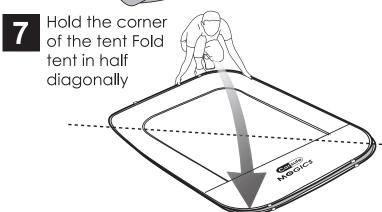


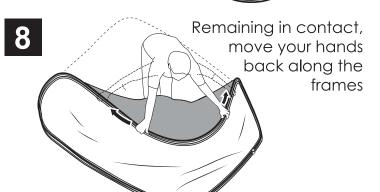


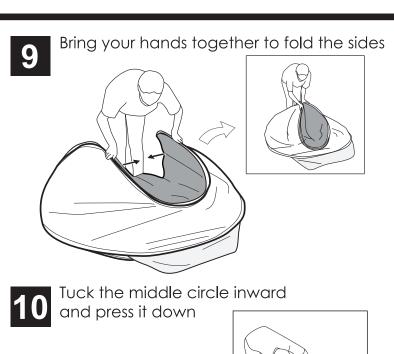

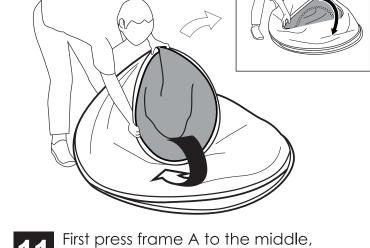

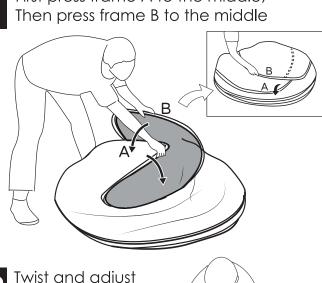

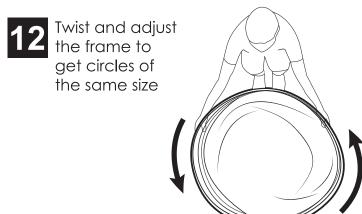

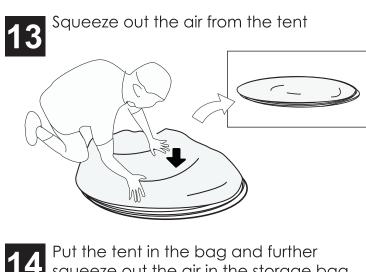

Put the tent in the bag and further squeeze out the air in the storage bag





